



Acoustical Surfaces, Inc.


SOUNDPROOFING, ACOUSTICS, NOISE & VIBRATION CONTROL SPECIALISTS

123 Columbia Court North • Suite 201 • Chaska, MN 55318
(952) 448-5300 • Fax (952) 448-2613 • (800) 448-0121

Email: sales@acousticalsurfaces.com
Visit our Website: www.acousticalsurfaces.com

We Identify and **S.T.O.P.** Your Noise Problems

NOISE S.T.O.P.™ Installation Instructions

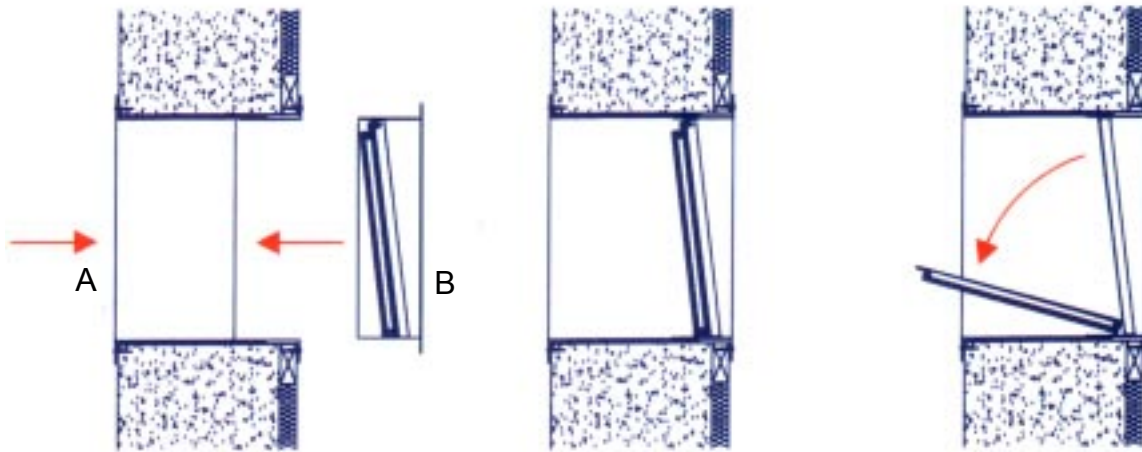

1. Insert Unit "A" (wall sleeve only) into rough opening from projection booth.
2. Level into opening and shim as required.
3. Pre-drill (8) holes through mounting holes supplied into wall and insert screws.
4. Carefully fill void area between rough opening and unit "A" with acoustic sealant on all four sides being sure to seal completely.
5. Insert Unit "B" (wall sleeve with glass) into unit "A".
6. Pre-drill (8) holes through mounting holes supplied into wall and insert screw.
7. Caulk gap between unit "A" and unit "B" with acoustic sealant on all four sides.